 


WaterSentinel™


Installation Instructions for the WSW-1 or -2

STEP 1




Locate filter below the refrigerator. Slowly turn the cartridge 1/4 turn counter-clockwise and remove. Remove knob from old filter.

STEP 2

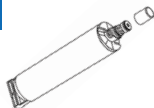


Remove all packaging, and remove the red protective cap from the top. Note installation date on reminder sticker and place in a convenient visible location.

STEP 3

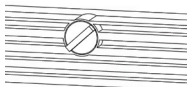

Slide knob from old filter onto new filter. Insert filter into refrigerator and turn 1/4 turn clockwise until firmly seated.

STEP 4

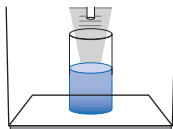

Run water for 3 minutes through the dispenser to flush the filter.

The filter cartridge should be replaced every 6 months or sooner if the flow of water to the dispenser or ice maker decreases.